

SERVICE BULLETINS

Please check for part updates!

Version	Parts No	Short Description
NY04	BN44-00329A	SMPS
IY02	BN44-00329B	SMPS
IY02	BN94-03248B	Main PCB
ALL	BN96-12651A	Logic Main PCB
ALL	BN96-12652A	Buffer E
ALL	BN96-12653A	Buffer F
ALL	BN96-13067A	X Main
ALL	BN96-13068A	Buffer X
ALL	BN96-13069A	Y Main
ALL	BN96-13070A	Buffer Y
ALL	BN96-13389B	Function Touch PCB
IY02	BN96-14703A	Main PCB
NY04	BN96-15648A	Main PCB
IY02	BN96-13265A	Panel
ALL	BN96-11138A	Stand Guide
ALL	BN96-12978A	Front Cover
ALL	BN96-13004D	Rear Cover
ALL	BN96-13016C	Stand Base
IY02	BN40-00140B	Tuner
ALL	BN59-00997A	Remote
ALL	BN96-12469E	LVDS Cable
ALL	BN96-12832A	Speaker
ALL	3903-000467	Power Cord
IY02	4301-000103	Battery
ALL	BN63-01798B	Cleaning Cloth
ALL	BN96-10788A	Accessory Pack

HELP : 1-888-751-4086 (Tech Support)
1-866-894-0637 (FE)

GSPN

<http://gspn3.samsungcsportal.com>

PLUS ONE

<http://my.plus1solutions.net/clientPortals/samsung>

HOT TIPS

-Power On Problems: (pg. 3)


-Video Problems: (pg. 4)

FIRMWARE

Please check for updates!

--6/25/10. 1006.0

-Buzzing noise level will be reduced

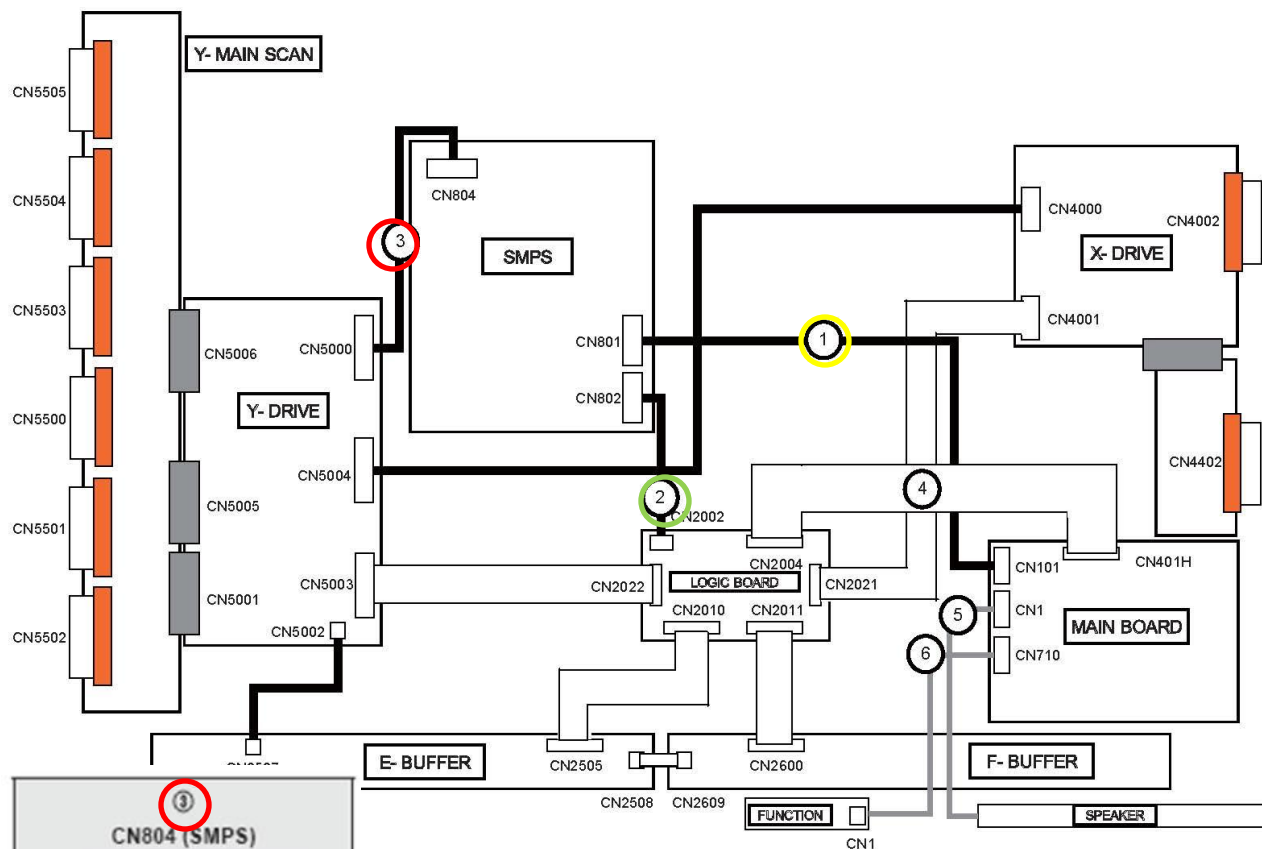

① CN801 (SMPS) ↔ CN101 (Main Board)	
Pin No.	Signal
1	PS_ON
2	STBY
3	GND_15Vamp
4	15Vamp
5	GND_5.3V
6	GND_5.3V
7	5.3V
8	5.3V
9	GND_15V
10	15V
11	15V
12	5.3V

③ CN804 (SMPS) ↔ CN5000 (42" Y Board) / CN5601 (50" Y Board)	
Pin No.	Signal
1	Vs
2	Vs
3	GND
4	Vg
5	GND
6	Va

Power On Sequence

- STBY 5V (Pin 2 CN801)
- PS_ON (approx 3.3V – 0V) (Pin 1 CN801)
- VS_ON (approx 0V – 3.3V) (Pin 6 CN802)


② CN802 (SMPS) ↔ CN2002 (Logic Board)	
Pin No.	Signal
1	D5.3V
2	D5.3V
3	GND
4	GND
5	PS_ON
6	VS_ON

Fast Track Troubleshooting Manual



“Troubleshooting”

Activating Power & Logic Board Test Patterns without Main Board:

1. Remove Power Cord to Panel
2. Short Highest 2 Pin #s on Logic Board Test Jig (Can be 4 Pin or 6 Pin)

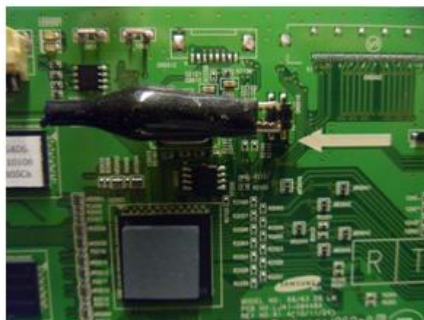

3. Remove Power Connector at Main Board (keeping connection to SMPS)
4. Short “Power On” Pin to Circuit Ground on Power Connector to SMPS.
5. Connect Power Cord to Panel

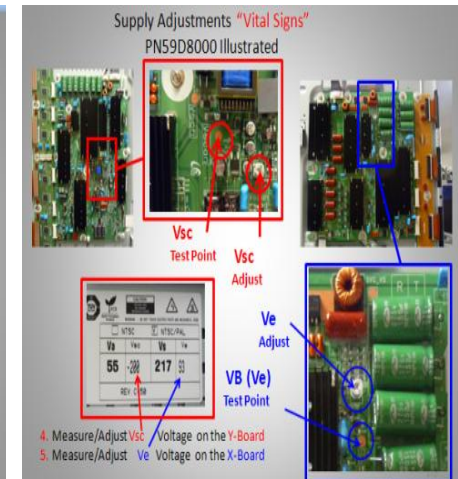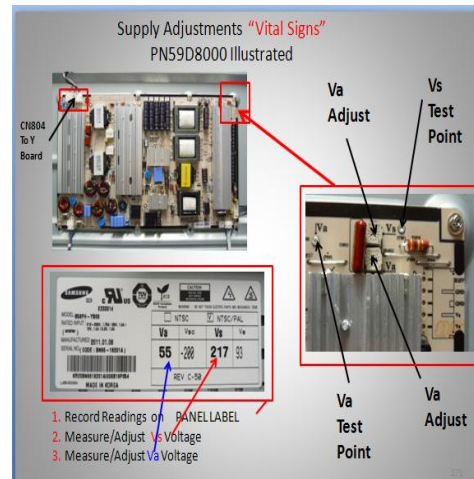

SAMPLE VIEW & READINGS

“VITAL SIGNS”

When troubleshooting, It's very important to first check **Vs, Va, Vsc & Ve**. If **Vs** is missing (0V), disconnect power and check for short. Use ohm meter to measure resistance while disconnecting Y-Board & X-Board supply feeds one at a time.

Turn Power On and Test SMPS with short connector removed for correct Vs voltage verification. (It may only come up briefly but to full level). Again be careful not to reconnect Power Connectors until Vs falls below 10V.

If **Va** is low or missing, disconnect Supply Feed to Address Boards and Check to see if SMPS Supply is restored. (Note Va feed normally passes through the Y-Drive to the Address Boards (Logic Buffer Boards)).

If **Vsc** is low or missing and Vs was OK, the failure is with the **Y-Board** since the Y-Board generate the Vsc voltage from the Vs supplied by the SMPS.

If **Ve** is low or missing and Vs is OK, the failure is with the **X-Board** since the Ve is generated by the X-Board from the Vs supplied by the SMPS. Please note in some rare cases the Ve may be generated by the Y-Board feed to the X-Board.)

Other SMPS Voltages:

Check Low Voltage feeds to the Main Board and other supplied Assemblies.

Power Supply Trouble Shooting Notes:

2010/2011 models

Will not be run with the “X” or “Y” main disconnected. The SMPS will shut down immediately. However if a meter is first connected to the test point when power is applied it will read the correct voltage briefly before shutting down. (You have enough time to check key voltages)

CAUTION: Do not reconnect any connectors to SMPS or Y/X Boards until power has been turned off long enough for Vs to drop below 10V or damage will occur to X or Y Boards.

Over Current Protection

For the SMPS Power Supply... If a short circuit occurs on either the VS or VA voltage lines, the SMPS stops operating, but should not fail. When the short circuit is removed from the source line, the Power Supply will operate normally again. **Many SMPS Supplies are replaced needlessly!**

TROUBLESHOOTING VIDEO PROBLEMS

1. Verify Video Operation

- Customer Picture Test** (if available)
- "Display"** (If display is OK source is suspected)
- Substitute with known good Source
(**external DVD or Signal Generator**)

2. Using Test Patterns in Service Mode


- ENTERING SERVICE MODE -

- | Customer Remote | Service Remote |
|---------------------|------------------|
| 1. Power off | 1. Power On |
| 2. Mute, 182, Power | 2. Info, Factory |


3. Determine cause

- If Logic pattern is NG; Logic board, Logic buffers or Panel are suspect.
- If FBE patterns is NG and Logic is OK; Main or LVDS cable are suspect.
- If both are OK it is likely a source issue.

2010 PDP Signal Path for Troubleshooting

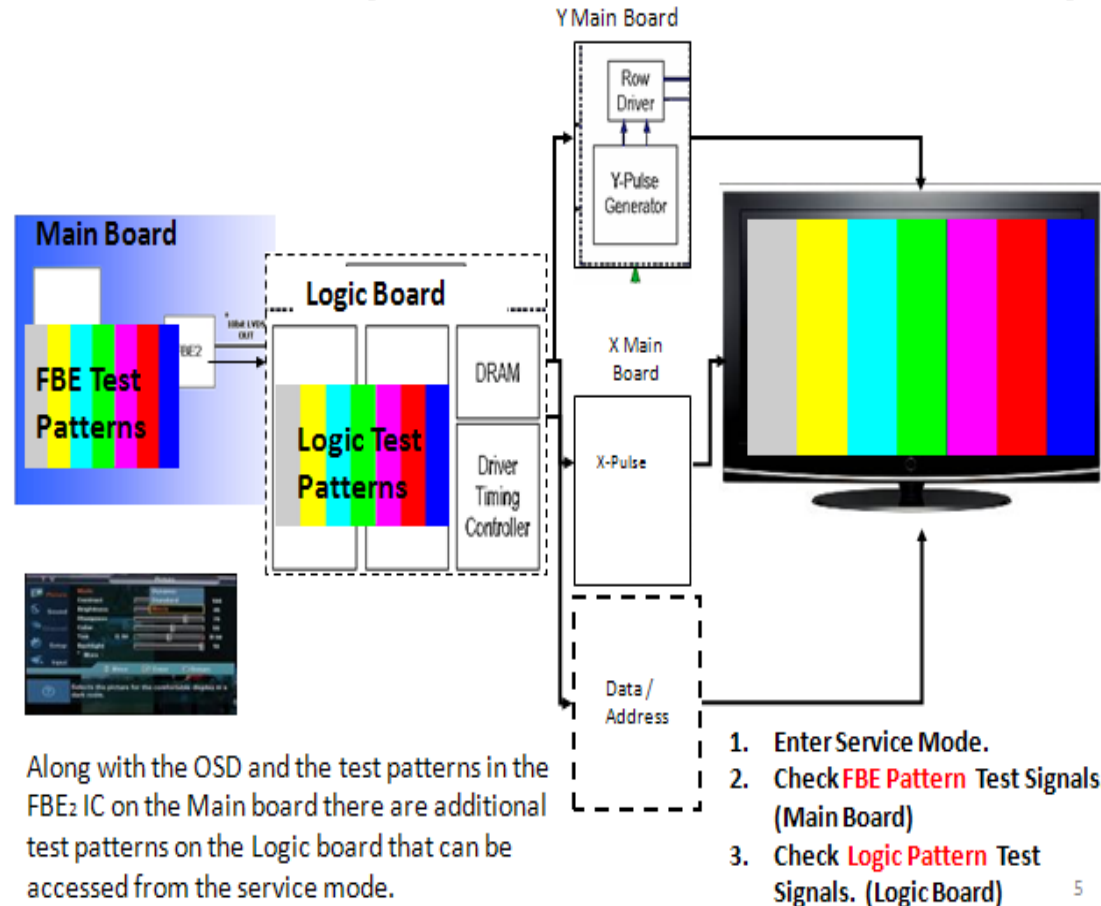

"Y" Board Failure Examples

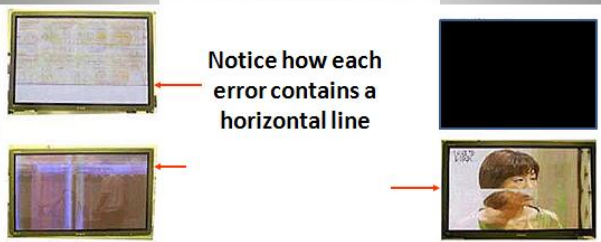


Notice how each error contains a horizontal line

These examples show Y board errors, because the Y electrodes run horizontally, errors can often be seen across the screen.


2010 & 2011 Y board errors will be detected by the Logic Board and often create a High Voltage Power Down ("VS ON" to Off) condition.

When failure exists on either the Y-Board or the Y-Buffer Boards, be sure to replace both assemblies. A failure on either Board can create a failure on both assemblies.

Y Buffer Boards Failures

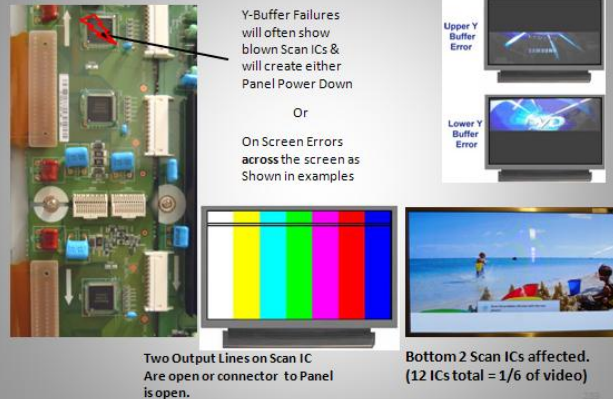


"X" board Failure Examples

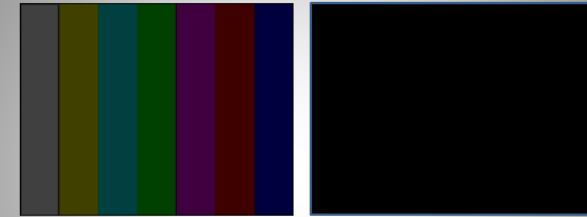

- In this left screen example, the sustain signal from the X board is low or missing.
- For 2009 Models and Older: Verify operation of the X board by disconnecting the power supply cable to the X board. If the other boards are working the picture will be dark.
- If the X-Board Power or Y-Board Power is removed, however, on 2010 or 2011 Models, an error will be detected and the VS Supply from the SMPS will be turned off by the Logic Board. A Black Screen (on right) will occur.


Logic Board Failure Examples

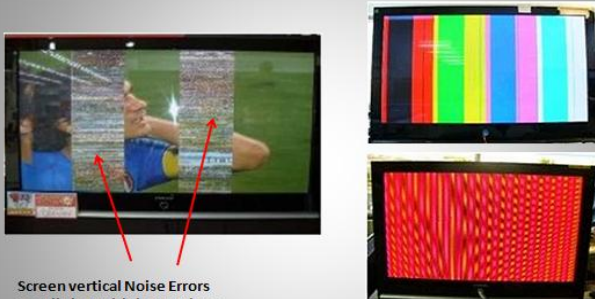

Screen vertical Noise Errors usually in Multiple Locations

The examples show the panel illuminated but displays with incorrect noisy video.


Logic Buffer Board Failure Examples

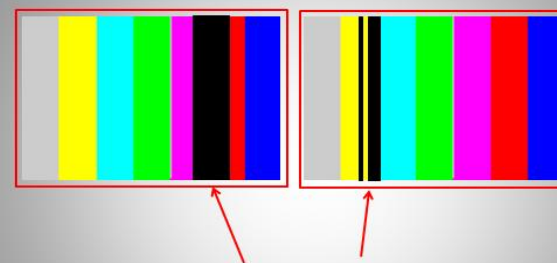

Normal Video Screen with added Vertical Black, Red, Green, or Blue Bar Errors


The examples show the panel illuminated, display is Normal except for area of Logic Buffer Board Failure.

"X" board Failure Examples

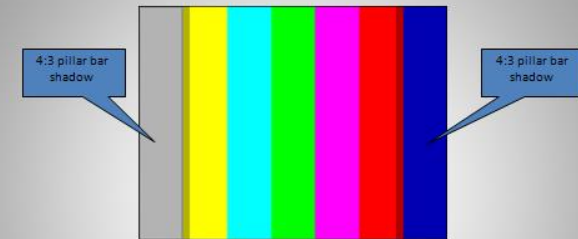


- In this example the **Ve** initialize signal is low or missing creating image retention. No Erasing.
- Troubleshoot the X Board by verifying that the **Ve** Voltage is correct with the label on the Panel.

Main Board Failure Symptoms

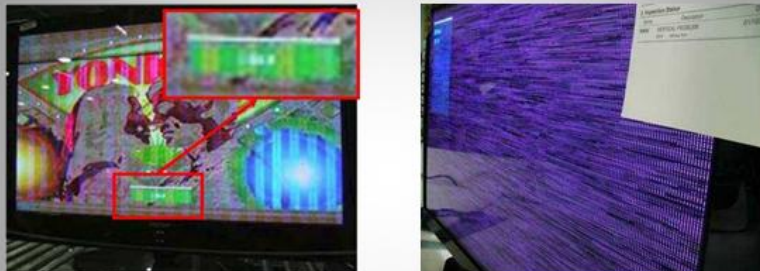

- Main Board errors are similar to logic errors but the problem can be on a single source such as the tuner.
- If the Menu also shows the defect the main board is suspected

PDP Panel Troubleshooting

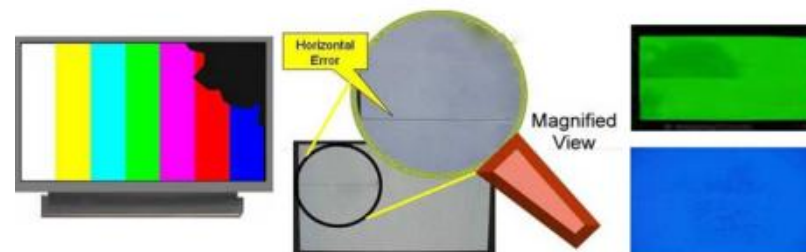

Plasma Panel Failure Examples

- Plasma Panel failure can usually be identified by observation. Single sub pixel columns or rows that are black or white always are panel failures. Other lines or lines that vary with content are almost never panel failures. Individual pixel errors are almost always panel related.

ALIGNMENTS:

SPECIAL NOTES:

See bulletin “Red Dots” for correction/adjustments for this model.

1. Check/Adj. VS, VA, VE, & VSC according to Panel Label and Diffusion test. (see bulletins for any special notes before making changes)

2. Check/Set Option Bytes:

- ENTER SERVICE MODE -

Customer Remote

1. Power off
2. Mute, 182, Power

Service Remote

1. Power On
2. Info, Factory



DIFFUSION TEST/ADJ. (cell miss-firing, older units)

- Allow the unit to warm up 15 to 20 minutes
- Access the Burn Protect Sig. Pattern in Cust. Menu.
- Adjust the Vs volts until screen errors are gone in both dark and bright areas.
- Adjust the Vs volts within +/- 10V on the panel label.



Model Code	Side Label	F/W directory	Option							
			Type	Model	Tuner	Region	DDR	Light Effect	Audio AMP	Front Color
PN42C430A1DXZA	IY01	T-SAT4AUSHC	42HHcD3	PC430	Xugang	US	ETRON	OFF	TAS5715	S-C-BLK
	IY02	T-SAT4AUSHC	42HHcD3	PC430	Xugang	US	ETRON	OFF	TAS5715	S-C-BLK